Adductoplasty

Midfoot Correction System

Key Steps and Fluoro Checks



Instrumented Approach for Corrective 2nd & 3rd TMT Joint Arthrodesis



Adductoplasty

Midfoot Correction System

Bringing together Lapiplasty* Lesser TMT Fixation and precision Adductoplasty** instrumentation for the first, comprehensive system designed for reproducible realignment, stabilization, and fusion of the midfoot.

Plane.

The Adductoplasty™ Planer allows for congruent planing of the 2nd & 3rd TMT joint surfaces (for insertion of the Adductoplasty™ Lesser TMT Cut Guide).

Cut.

The Adductoplasty™ Lesser TMT Cut Guide is designed to deliver precise, continuous angular cuts of the 2nd & 3rd TMT joints.

Compress.

The Adductoplasty™ Compressor is designed to deliver controlled apposition and compression of the corrective arthrodesis.

Fixate.

The low-profile titanium plates of the **Lapiplasty*** **Lesser TMT Fixation System** are designed to provide locking fixation for corrective arthrodesis of the lesser TMT joints.








Comprehensive System for Midfoot Pathologies

Instrumented approach designed to address metatarsus adductus and arthritis of the lesser TMT joints.

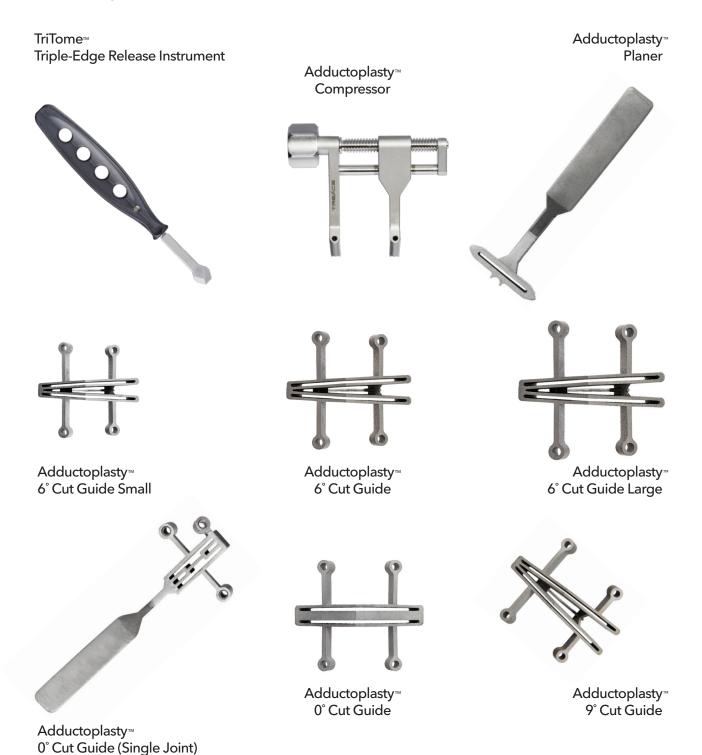

Surgical Approach

Begin the procedure by locating the 2nd and 3rd tarsometatarsal (TMT) joints under fluoroscopy with a lateral oblique view. Mark a longitudinal incision extending 6-8cm in length, centered over the 3rd TMT joint.

Note: If also performing a 1st TMT arthrodesis procedure, it is important to ensure an adequate skin bridge (approximately 4cm or greater) between the two incisions.






Joint Exposure and Dissection

Carefully dissect through the skin, subcutaneous tissue, and retinaculum taking care to leave the ligamentous attachments between the 2nd and 3rd metatarsals intact. Retract between the extensor digitorum longus (EDL) and extensor digitorum brevis (EDB) muscle. Locate and expose the 2nd and 3rd TMT joints. Completely release the interval between the 3rd and 4th metatarsal base with the TriTome™ Triple-Edge Release Instrument and/or osteotome.



Plane the 2nd & 3rd TMT Joint

Insert the prongs of the Adductoplasty™ Planer into the corresponding 2nd and 3rd TMT joints. Using a sagittal saw, advance the saw blade through the Planer to plane the offset between the 2nd & 3rd TMT joints. This creates continuous, congruent joint surfaces for insertion of the Adductoplasty™ Cut Guide.

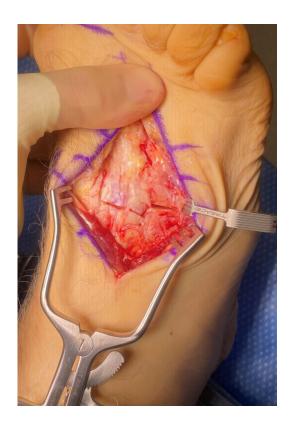



Cut Guide Application

Insert the keel of the **Adductoplasty™ Cut Guide** into the planed 2nd and 3rd TMT joints, ensuring the cut slots extend to the medial aspect of the 2nd TMT joint. Assess the **Cut Guide** position clinically and with oblique fluoro images down the 2nd and 3rd TMT cut slots.

Note: The **Fulcrum** can be inserted between the 3rd & 4th metatarsal bases to help serve as a retractor and protect the 4th metatarsal when making cuts.


Note: When obtaining the proper "gunsight" fluoro views down the 2nd and 3rd TMT cut slots, the **Cut Guide** fixation holes should become "perfect circles."



Secure the **Cut Guide** with three 2mm halfpins. Utilize the sagittal saw to make continuous metatarsal and cuneiform cuts across the 2nd and 3rd TMT joints, ensuring the saw is kept parallel with the pins on each cut slot.

Note: The **Cut Guide** is angled in the frontal plane to accommodate the transverse arch of the foot.



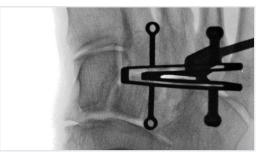





Prepare and Fenestrate TMT Surfaces

Remove the 2mm half-pins from the **Cut Guide**. Utilize osteotomes and/or long, straight rongeurs to remove the bone slices and any remaining plantar bone fragments. Inspect the joint surfaces to confirm that all articular cartilage has been removed, using a curette as necessary to remove residual cartilage. Confirm with fluoroscopy.










TMT Compression & Provisional Fixation


While manually closing the TMT joints, place the Adductoplasty Compressor across the most lateral aspect of the 3rd TMT joint and insert 2mm half-pins. Tighten the Compressor to appose the joint surfaces utilizing "two-finger tightness" and confirm uniform apposition of the 2nd and 3rd TMT joint surfaces clinically and on fluoroscopy.



Select a 4-hole Lapiplasty* Lesser TMT Fixation Plate and apply the plate to the dorsal surface of the 3rd TMT joint with the mid-section of the plate centered over the arthrodesis site. Confirm the plate position on fluoroscopy. Pre-drill and insert the appropriate locking screws.





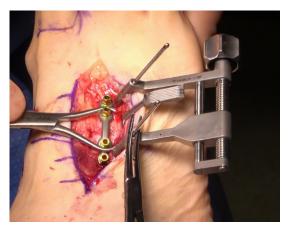




Apply the **2.0mm Threaded Olive Wire** or **Compressor** across the 2nd TMT joint for provisional fixation. Select an additional 4-hole **Lapiplasty Lesser TMT Fixation Plate** and repeat the previous step for the 2nd TMT joint.





Instrumented Approach for Reproducible Results

Case examples demonstrating metatarsus adductus correction and lesser TMT arthritis correction with the Adductoplasty $^{\text{\tiny{TM}}}$ System.

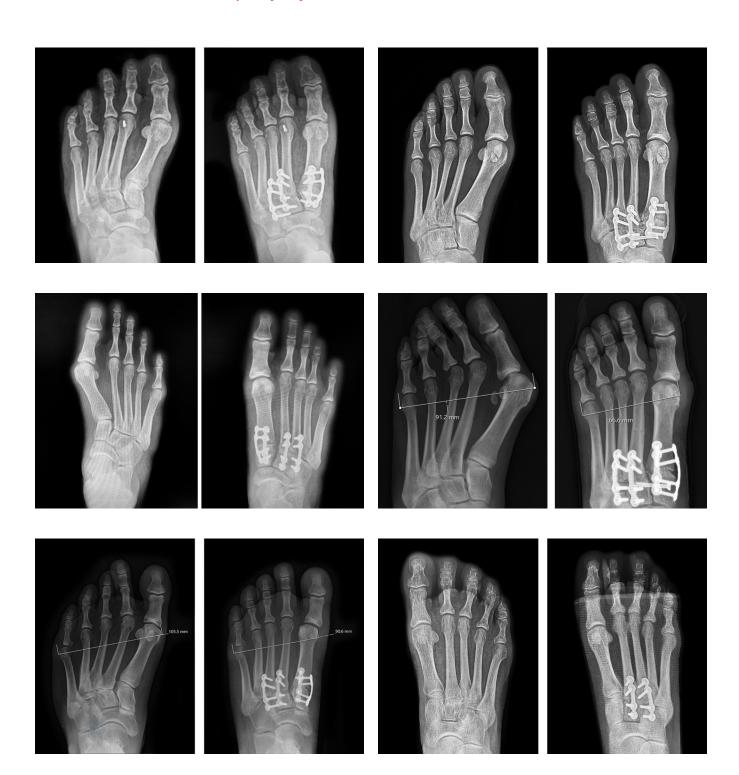

Notes:

Learn more about the Adductoplasty™System at Lapiplasty.com





Adductoplasty[™] is a surgical procedure. There are risks associated with surgery.

Potential risks include: infection, pain, implant loosening, and loss of correction with nonuinion.

For more information on benefits and risks, visit www.Treace.com.